



4* is positioned UNDERNEATH the chassis

LIST OF SPARES

Item	Description	Pack	R2488	R2489	R2490	R2604	R2577 R2639 R2640 R2747	R2746
1	Drive Unit Complete	1	X9395	X9395	X9395	X9395	X9395	X9395
2	Cam for Couplings and Springs	set	X9396	X9396	X9396	X9396	X9396	X9396
3	Pcb Main Board	1	X9397	X9397	X9397	X9397	X9397	X9397
4	Pcb Light Switch Unit*	1	X9398	X9398	X9398	X9398	X9398	X9398
5	Wire Joiners	18	X9236	X9236	X9236	X9236	X9236	X9236
6	Buffer Assembly	4	X9399	X9399	X9399	X9399	X9399	X9399
7	Motor Unit and Pads	1	X9400	X9400	X9400	X9400	X9400	X9400
8	Worm Pinion Shaft Assembly	set	X9401	X9401	X9401	X9401	X9401	X9401
9	Universal Joints	10	X9244	X9244	X9244	X9244	X9244	X9244
10	Doors	pack	X9402	X9403	X9404	X9611	X9612	X9402
11	Contacts in Cab / Plate	1	X9405	X9405	X9405	X9405	X9405	X9405
12	Front Lights / Cab Unit	1	X9406	X9407	X9408	X9406M	X9406M	X9406M
Not Illustrated	Rear Lights / Cab Unit	1	X9409	X9410	X9411	X9406M	X9406M	X9406M
14	Small Coupling Assembly	1	X5069	X5069	X5069	X5069	X5069	X5069
15	Coupling Pack (coupling + pocket)	pack	X9412	X9412	X9412	X9412M	X9412M	X9412M
Not Illustrated	Assembly Bag	pack	X5593	X5593	X5593	X5593	X5593	X5593