


# DCC MODE INSTRUCTIONS




(DCC power source required. Use Bachmann E-Z Command® as shown or equivalent.)

## For decoder installation:


- a) Remove the building
- b) Remove the cover by loosening the three screws

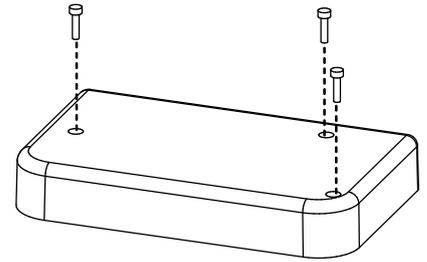

- c) Remove the supplied 8-pin dummy plug and install the decoder as below. Plug can be saved and reused if desired to go back to DC mode

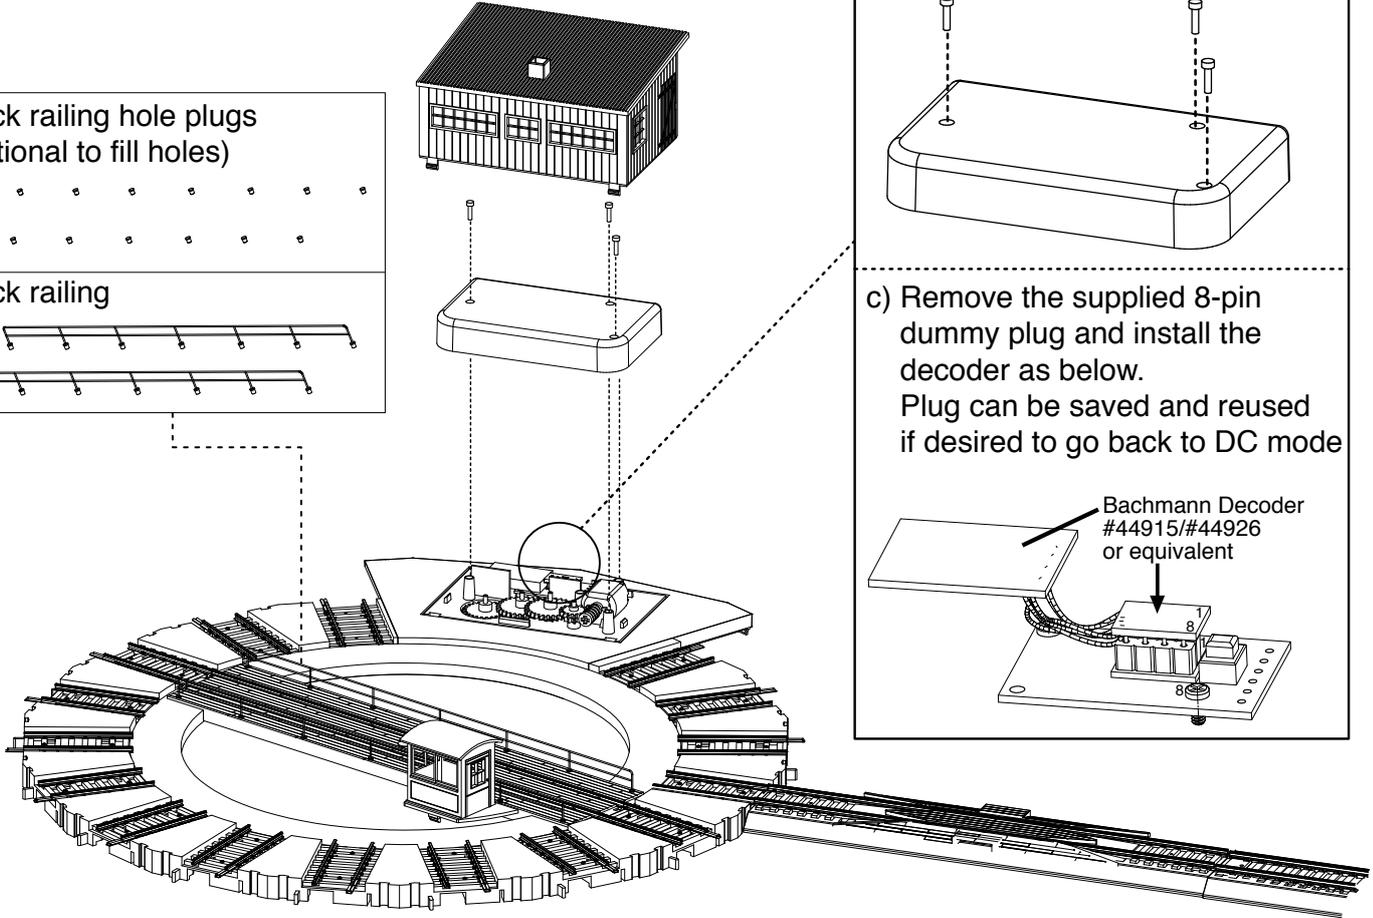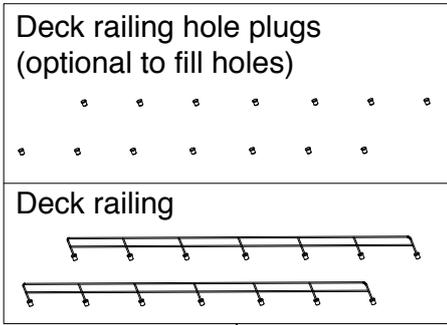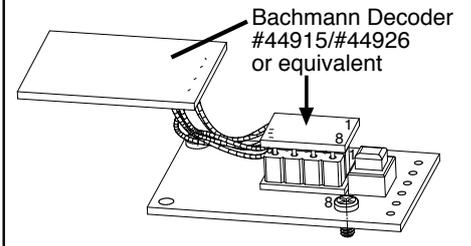


AC Power pack

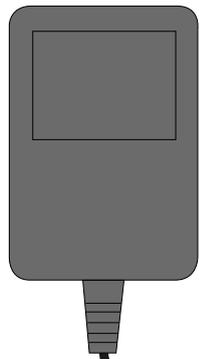

Power out to track  
(Connector for E-Z Track® shown. If more length required use plug-in 10' red power extension wire #44498)

Turntable direction control

Turntable speed control

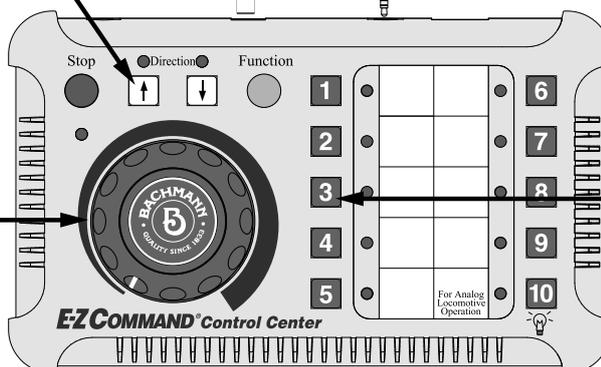

Select decoder address 3 for turntable control or reprogram if desired.

E-Z Command® Control Center with power pack sold separately (#44902)