


GP-38 DUMMY DIESEL LOCOMOTIVE INSTRUCTIONS

Thank you for purchasing a Williams by Bachmann® locomotive. This locomotive has been manufactured to provide years of use and enjoyment. Please follow the simple instructions below.

Before operating, please lightly lubricate the points shown in the diagram below. Do not over-lubricate and take extra care to avoid getting lubricants on the wheel surfaces.

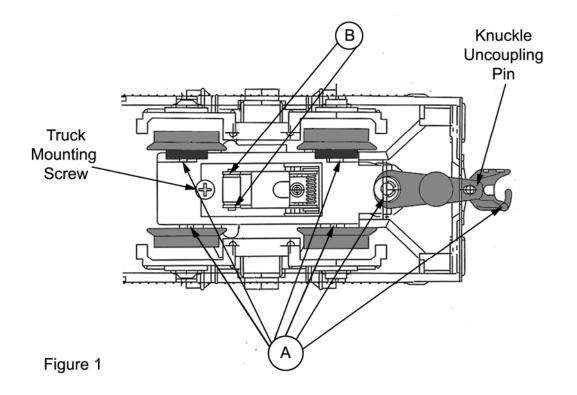

- 1. For the axles and coupler pivot points **Marked A**, we recommend that you lubricate with a small amount of light oil such as Bachmann E-Z Lube® #99984 Light Gear Oil. **Do not over-lubricate**.
- For areas that require electrical flow, such as roller pick-ups Marked B, please use Bachmann E-Z Lube® #99981 Conductive Contact Lube. Never use any Teflon® based oil on these areas because this type oil has insulating properties.

OPERATION

After unpacking the locomotive, make sure that the uncoupling plunger is in the correct position with the pin inserted in the knuckle (see figure 1). Failure to do so will allow the uncoupling plunger to contact the center rail and a direct short will occur when power is applied to the track.

Uncoupling

This dummy locomotive is equipped with operating knuckle couplers at both ends. To uncouple, position the uncoupling plunger over the center of electro-magnetic track uncoupling section and activate the magnet.

PERIODIC MAINTENANCE

Disassembly Instructions

You will have to remove the body shell for bulb replacement, or to install a power upgrade kit. The body shell is attached with four screws on the bottom of the locomotive frame. The screws are located in each corner of the frame. When you reattach body shell, please be careful not to over-tighten the screws.

Lubrication

We recommend that you lubricate as directed on page 1 every 10 hours of operation.

Light Bulb Replacement

This locomotive uses a 12 volt bayonet style bulb. The standard replacement bulb number is 53.

Power Upgrade Kit

A power upgrade kit, Williams by Bachmann® #00241, is available to convert this dummy unit into a powered unit. Please follow the installation instructions that are included with the kit.



Bachmann Industries, Inc. 1400 East Erie Ave, Philadelphia, PA 19124 USA www.bachmanntrains.com Customer Service Telephone 800-356-3910

| Part Number | Description | Number Used |
|--------------------|------------------------------------|-------------|
| GP-38 BODY & BODY | PARTS | |
| 809-M001 | Metal Frame w / handrails | 1 |
| 1-30100DFT | Screw(Mounts Body to Frame) | 4 |
| 809-01-01 | Body Shell | 1 |
| 322-02-01 | Ornamental 5-Chime Horn | 1 |
| 322-09-01 | Front Headlight Lens | 1 |
| 322-09-02 | Rear Headlight Lens | 2 |
| 809-X001,X002,X003 | Window Glass | 1 Set |
| 309-01-01 | Red Marker Lens | 4 |
| 322-06 | Fuel Tank (2 pieces L&R) | 1 |
| 1-26060DPM | Screw(Mounts Fuel Tank to Frame) | 4 |
| TRUCK PARTS | | |
| 293-M023FR1 | Flanged Wheel | 8 |
| 293-M029NR5 | Axle | 4 |
| 1-30140DPM | Truck Mounting Screw | 2 |
| 293-E001 | Operating Coupler Assembly | 2 |
| 322-04-01 | Pilot | 2 |
| 1-35060DFM | Pilot Mounting Screw | 2 |
| 293-E002R1 | Roller Pickup Assembly | 1 |
| 293-01-02 | Top Insulator for Roller Pickup | 2 |
| 293-01-03 | Bottom Insulator for Roller Pickup | 2 |
| 1-26220DPM | Roller Pickup Mounting Screw | 2 |
| 293-06-01 | Sideframe | 4 |
| 1-30060DPM | Sideframe / Bolster Mounting Screw | 10 |
| 293-10-03BR1 | Truck Mount | 2 |
| 293-M013R1B | Truck Bolster | 2 |

See Diagram on opposite side for identification. Parts shown in Italics are not illustrated.



