


4-6-2 WEST COUNTRY CLASS LOCOMOTIVE AND TENDER 2 AND 3-RAIL

No. 2235 2-RAIL — No. 3235 3-RAIL

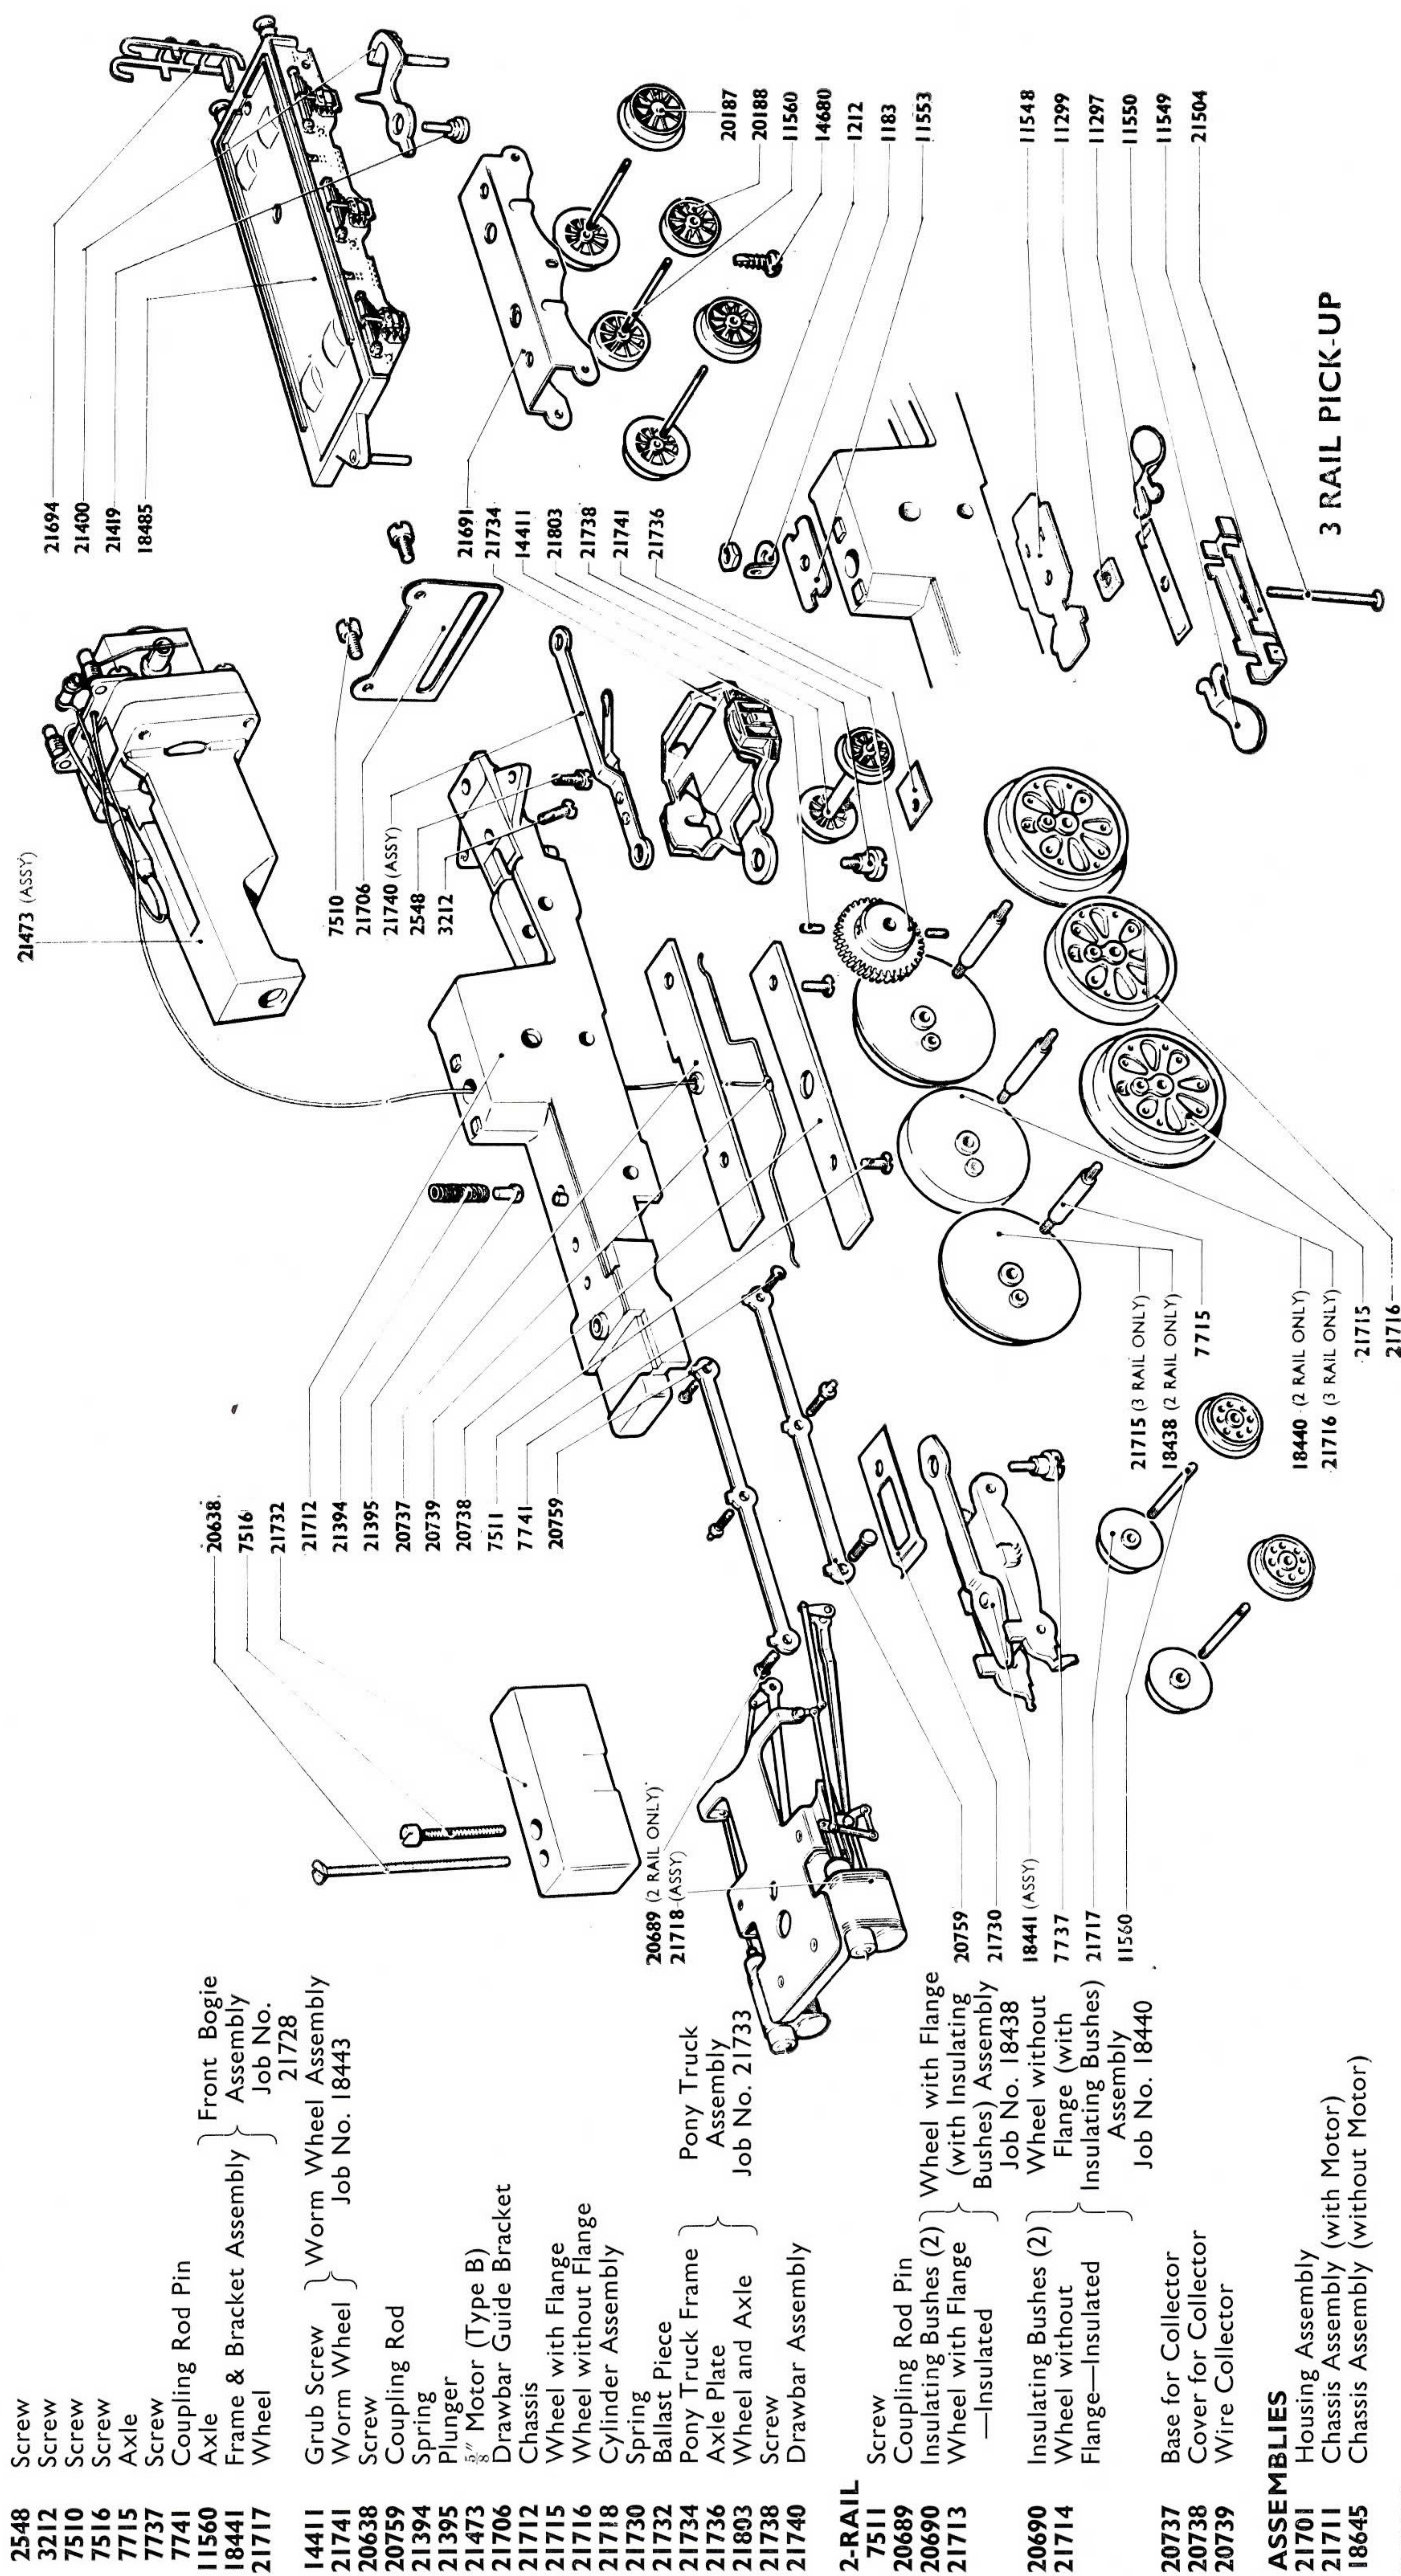

2548 Screw
3212 Screw
7510 Screw
7516 Screw
7715 Axle
7737 Screw
7741 Coupling Rod Pin
11560 Axle
18441 Frame & Bracket Assembly
21717 Wheel

Front Bogie Assembly
Job No. 18443
21728

Worm Wheel Assembly
Job No. 18443

14411 Grub Screw
21741 Worm Wheel
20638 Screw
20759 Coupling Rod
21394 Spring
21395 Plunger
21473 5/8" Motor (Type B)
21706 Drawbar Guide Bracket
21712 Chassis
21715 Wheel with Flange
21716 Wheel without Flange
21718 Cylinder Assembly
21730 Spring
21732 Ballast Piece
21734 Pony Truck Frame
21736 Axle Plate
21803 Wheel and Axle
21738 Screw
21740 Drawbar Assembly

Pony Truck Assembly
Job No. 21733

2-RAIL

7511 Screw
20689 Coupling Rod Pin
20690 Insulating Bushes (2)
21713 Wheel with Flange—Insulated

20690 Insulating Bushes (2)
21714 Wheel without Flange (with Insulating Bushes)
21717 Insulating Bushes Assembly
11560 Job No. 18440

20737 Base for Collector
20738 Cover for Collector
20739 Wire Collector

ASSEMBLIES

21701 Housing Assembly
21711 Chassis Assembly (with Motor)
18645 Chassis Assembly (without Motor)

3-RAIL

1183 Soldering Tag
1212 Nut
11297 Collector Shoe Spring
11299 Distance Piece
11548 Insulator for Collector Shoe Holder
11549 Collector Shoe Holder
11550 Collector Shoe
11553 Insulator
21504 Special Screw

ASSEMBLIES

18447 Housing Assembly
18646 Chassis Assembly (without Motor)
21747 Chassis Assembly (with Motor)

TENDER (2 & 3-RAIL)

11560 Axle
20187 Wheel with Flange
20188 Wheel without Flange
21691 Underframe
14680 Screw
21400 Coupling
21419 Rivet
21691 Underframe
12303 Coupling Pin
21694 Ladder

Underframe Assembly
Job No. 18444

Underframe & Coupling Pin Assembly
Job No. 18485