


## Tri-ang RAILWAVS



## RAILCAR-R.352

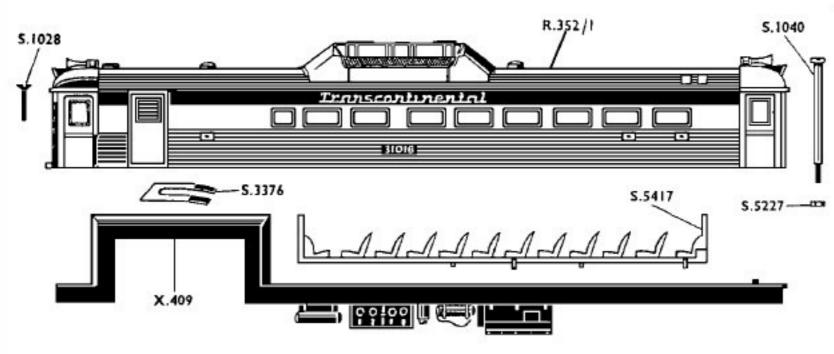

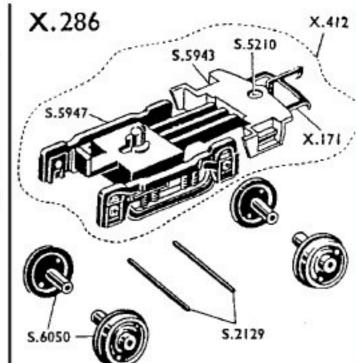

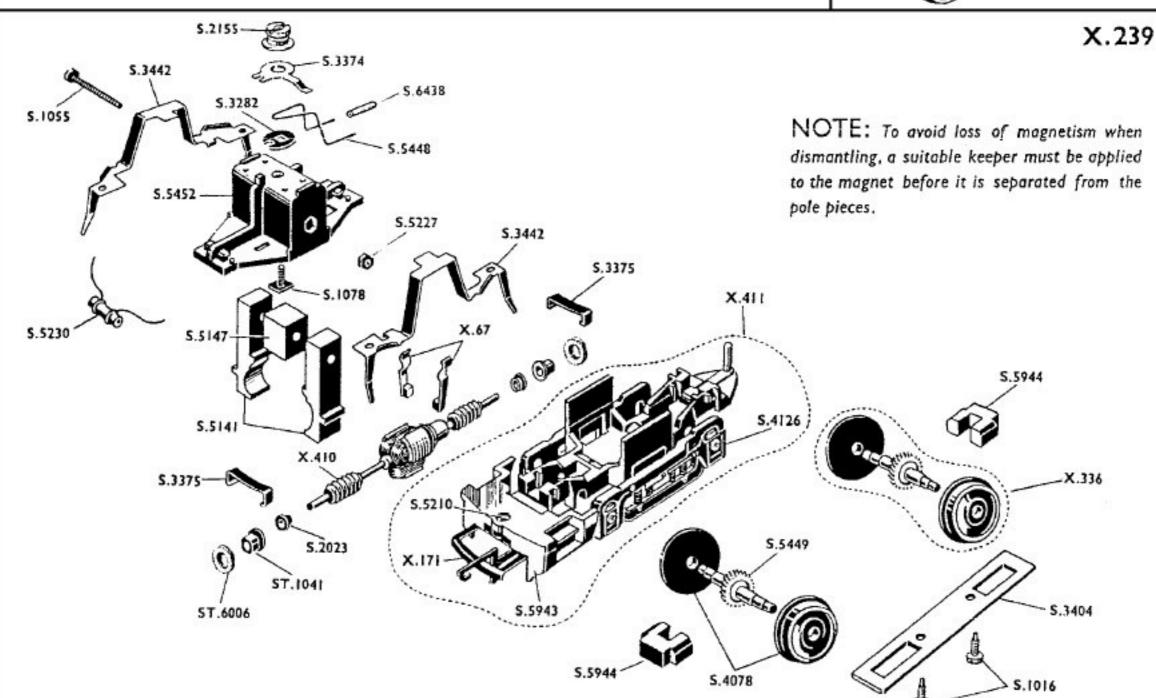

R.352/I	Body (with horns and windows)	5.1016	Keeper Plate Screw	S.5141	Pole Piece
X.67	Brush Arm and Brush	S.1028	Body Screw (short)	S.5147	Magnet
X.171	Mk. 3 Coupling Unit	5.1040	Body Screw (long)	S.5210	Coupling Eyelet
X.239	Power Bogie	S.1055	Magnet Screw	S.5227	8BA Nut
X.286	Non-powered Bogie	S.1078	Pivot Screw	S.5230	Capacitor
X.336	Axle Assembly (comprising	S.2023	Thrust Bush	S.5417	Seat Unit
	2—S.4078, 1—S.5449)	5.2129	Rolling Stock Axle-Plain	S.5448	Brush Spring
X.409	Chassis Assembly	5.2155	Pivot Nut	S.5449	Worm Wheel and Axle
X.410	Armature Assembly (including	5.3282	Insulating Washer	S.5452	Top Housing
	commutator and worms)	5.3374	Top Housing Contact Washer	S.5943	Pilot
X.411	Power Bogie Frame Assembly	5.3375	Bearing Clip	S.5944	Traction Magnet
	(comprising S.4126, S.5210,	S.3376	Power Bogie Retaining Clip	S.5947	Non-powered Bogie Frame
	\$.5943, X.171)	5.3404	Keeper Plate	S.6050	Rolling Stock Wheel-Disc
X.412	Non-powered Bogie Frame	S.3442	Collector Unit	5.6438	Insulating Sleeve
	Assembly (comprising \$.5947,	S.4078	Wheel for Power Bogie	ST.1041	Bearing Bush
	S.5210, S.5943, X.171)	5.4126	Power Bogie Main Frame	ST.6006	Bearing Felt

Modifications are made to Tri-ang Railways models from time to time. If a spare part is required which does not coincide with the illustration, a full description should be given and, if necessary, a sketch or sample should accompany the order.



PRINTED IN ENGLAND