 



2 - 10 - 0 LOCOMOTIVE CHASSIS - R.861



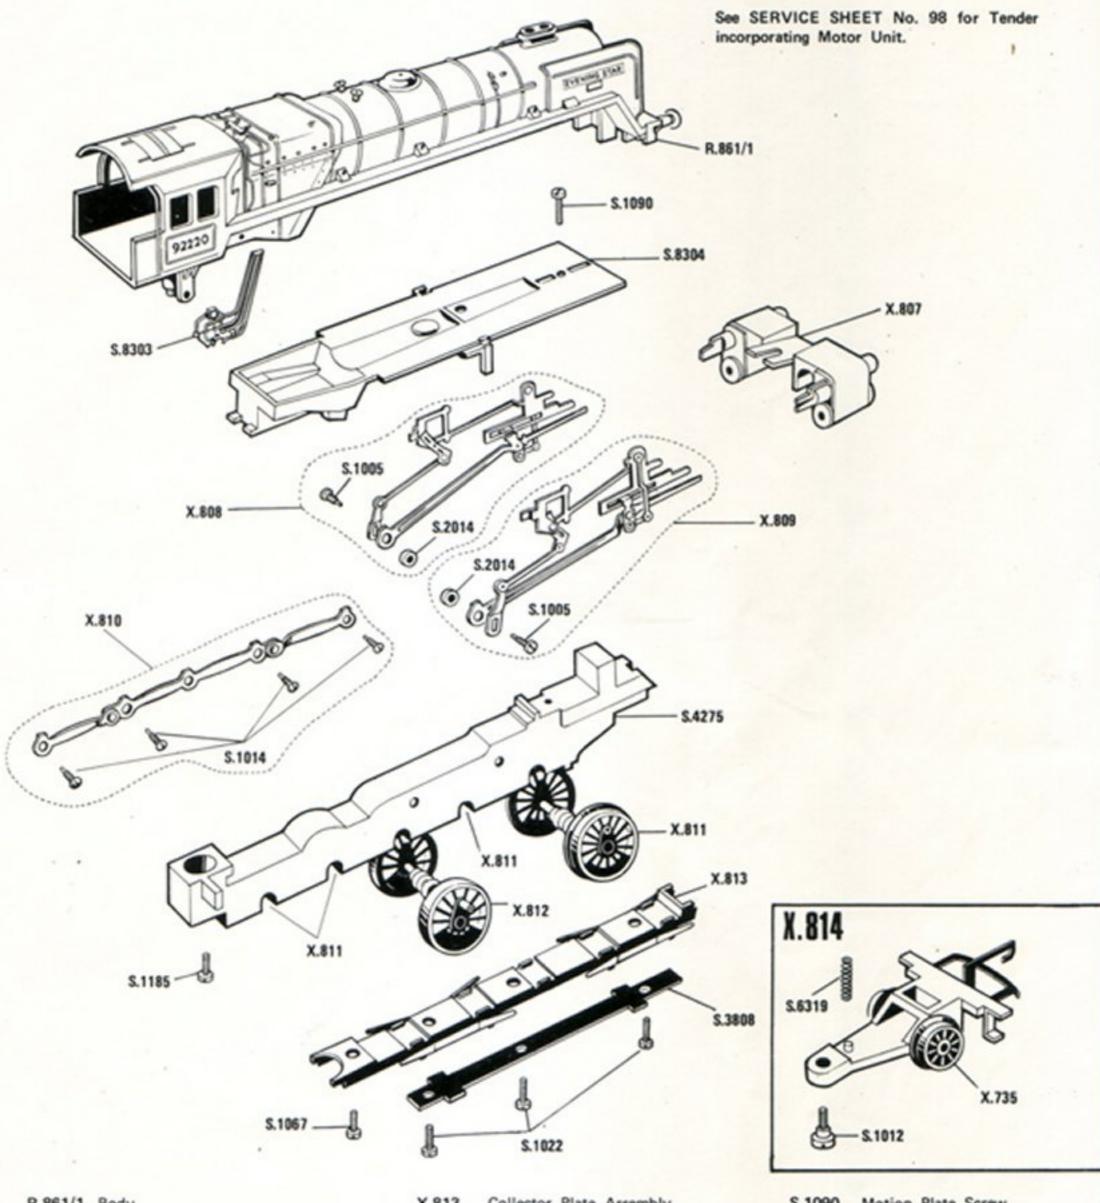

R.861/1	Body	X.813	Collector Plate Assembly
X.735	Wheel Assembly	X.814	Pony Truck
X.807	Cylinder Block		
X.808	L/H Valve Gear Assembly	S.1005	Gear Screw
X.809	R/H Valve Gear Assembly	S.1012	Pony Truck Screw
X.810	Coupling Rod Assembly	S.1014	Coupling Rod Screw
X.811	Flanged Wheels Assembly	S.1022	Collector Plate Screw
X.812	Flangeless Wheels Assembly	S.1067	Body Securing Screw

S.1090	Motion Plate Screw
S.1185	Drawbar Screw
S.2014	Distance Piece
S.3808	Collector Retaining Strip
S.4275	Chassis
S.6319	Pony Truck Spring
S.8303	Pipework
S.8304	Motion Plate

NOTE: 1) Wires from Locomotive Collectors to Tender are supplied with Tender parts, see Sheet No. 98.

Bushed Driving Wheels are on LEFT side of Locomotive.

3) Separate parts within an "X" assembly are not supplied unless numbered in the illustration.

Modifications are made to models from time to time. If a spare part is required which does not coincide with the illustration, a full description should be given and, if necessary, a sketch or sample should accompany the order.



A4 - Printed in England.