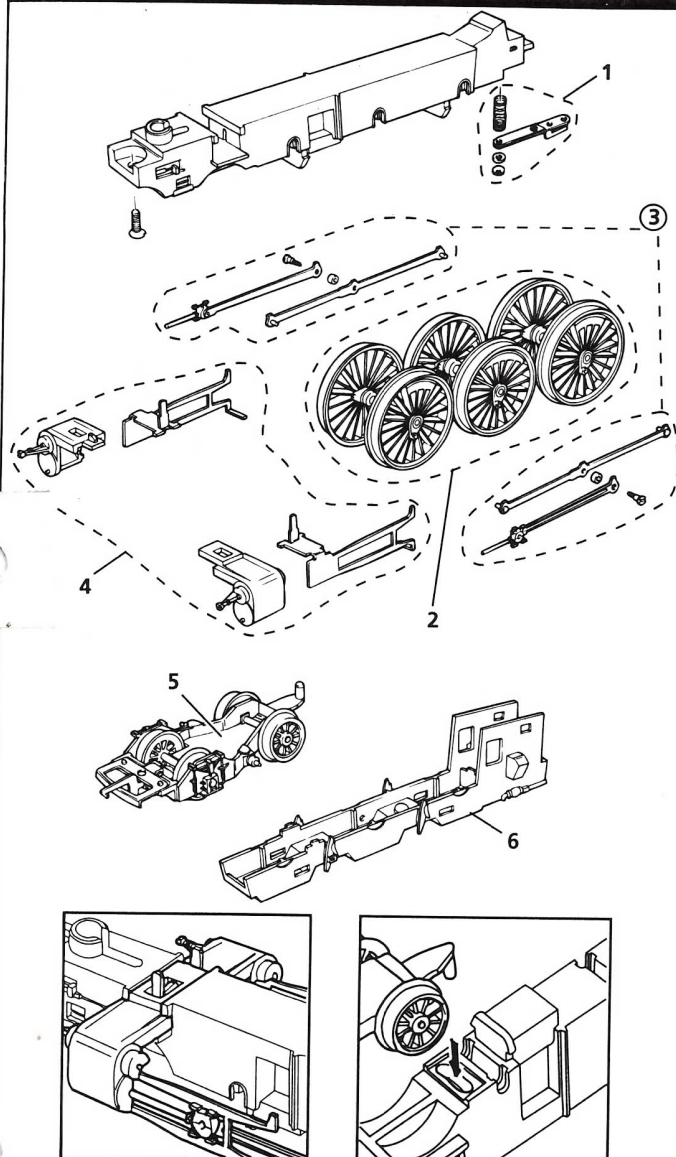
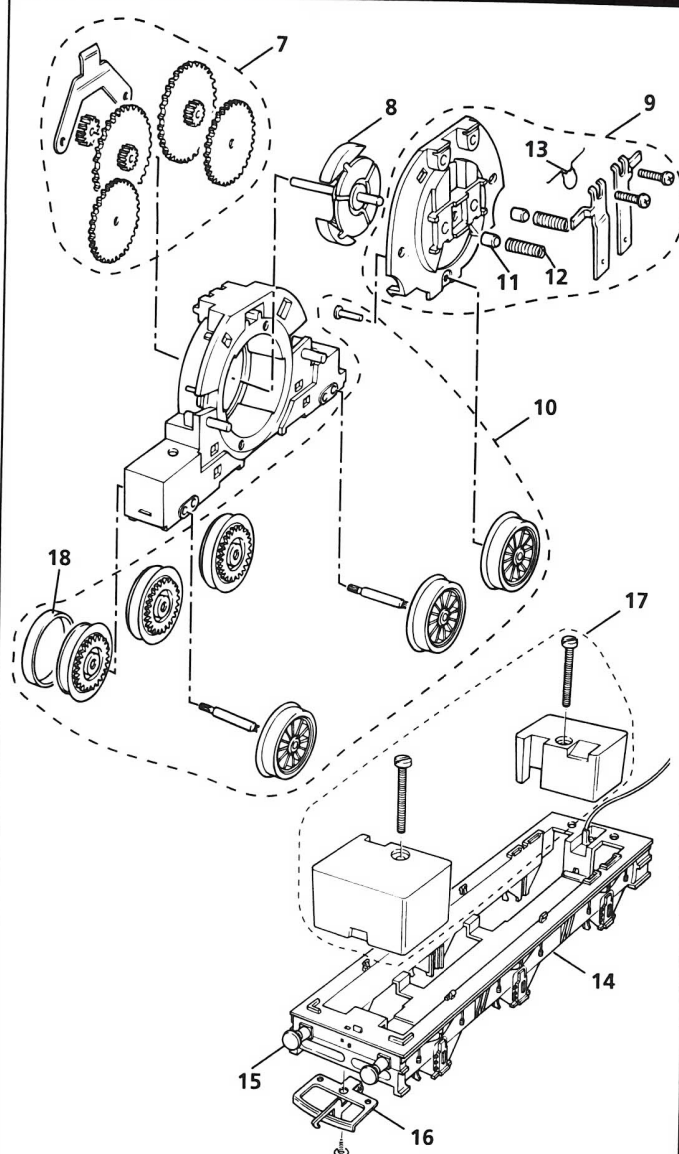


LOCOMOTIVE

TENDER

LIST OF SPARES

Item No.	Description	Pack	R845W	R737	R303	R2022
1	Drawbar Pack	set	X8215	X8215	X8215	X8215
2	Locomotive Wheel / Axle Set	set	X8216	X8216	X8216	X8216
3	Crosshead and Coupling Rods	set	X8213	X8213	X8213	X8213
4	Cylinder Block and Piston Guides	set	X8214	X8218	X8214	X8219
5	Bogie Assembly	1	X1013	X1013	X1013	X1013
6	Chassis Bottom	1	S9814	S9814	S9814	S9814
7	Ringfield Gear Set	set	X6021	X6021	X6021	X6021
8	Armature / Commutator	1	X803	X803	X803	X803
9	Ringfield Cover Plate Set	set	X6022	X6022	X6022	X6022
10	Ringfield Wheel / Axle Set	set	X8196	X8196	X8196	X8196
11	Carbon Brush	10	X8026	X8026	X8026	X8026
12	Brush Spring	10	X8027	X8027	X8027	X8027
13	Capacitor	10	X8032	X8032	X8032	X8032
14	Tender Chassis	1	X8197	X8197	X8197	X8217
15	Buffer	10	X8014	X8014	X8014	X8014
16	Coupling Unit	10	X8025	X8025	X8025	X8025
17	Tender Weights and Screws	set	X8195	X8195	X8195	X8195
18	Traction Tyres	10	X8030	X8030	X8030	X8030
—	Drive Unit Complete	1	X8220	X8220	X8220	X8220
not illustrated	Driver, Fireman and Vac Pipes	1+1+2	X1400	X1400	X1400	X1400