


Instructions to Repair Bachmann On30 Rail Bus Gears


Below are the parts you will receive. The drive line gears are indicated by the red arrow.



To fix the rear drive line remove these six screws indicated by the red arrows.

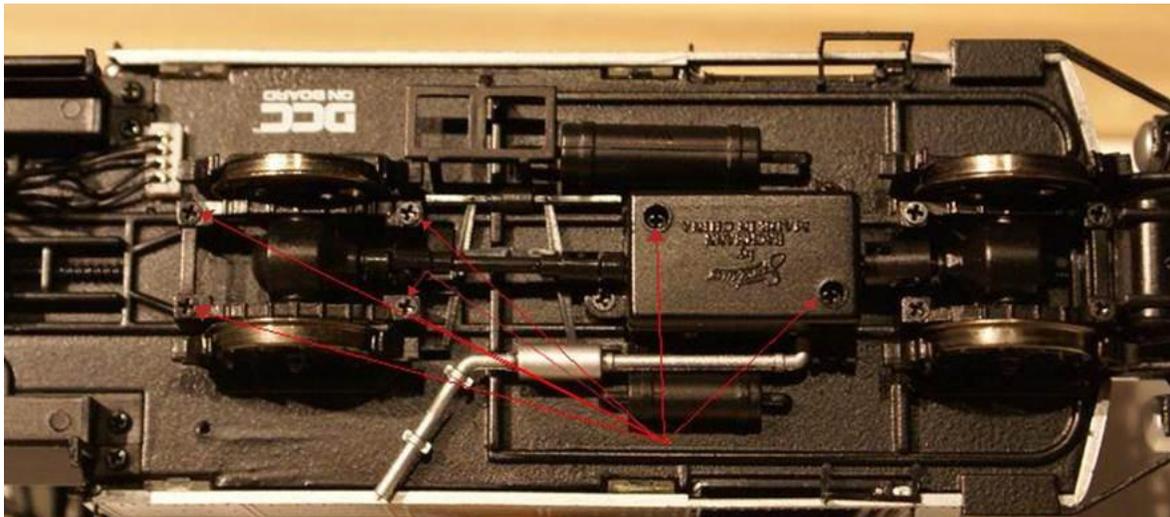

Remove the rear wheel and the drive line. Gently try to spin the gears on the shaft with your finger. The split gears will spin freely.

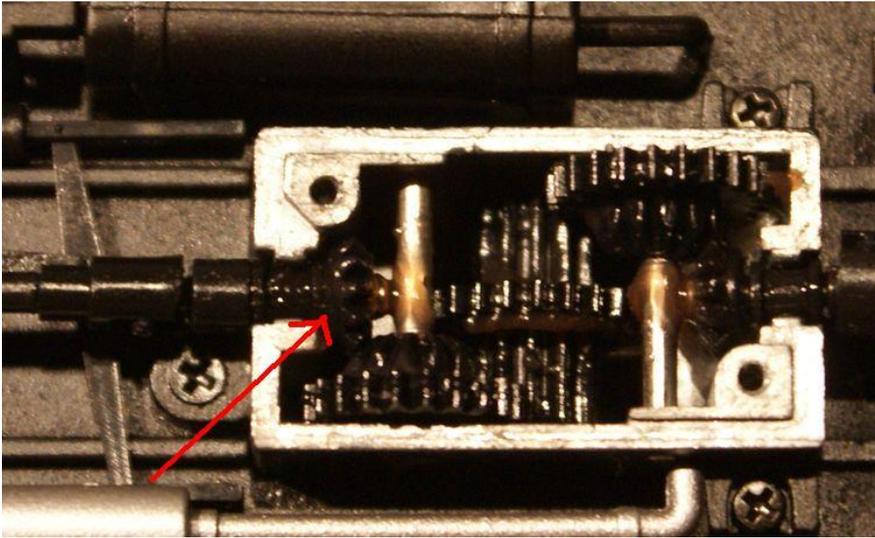

Replace the drive line with the parts indicated with the red arrow in the first picture. Replace the wheels and cover, and reattach screws.